

Ford Transit Parts 2.2L/2.4L

Part Name	Reference No.	Replacement	Output	
Chain tensioning guide	BK2Q 6K254 AB	8C1Q-6K254-AA	2.2	2.4
Chain guide	6C1Q 6M256 BB	8C1Q-6M256-CA	2.2	2.4
Chain guide	CK3Q 6M256 AA	8C1Q-6M256-BA	2.2	
Chain guide	BK3Q 6M256 BA	CK3Q6M256BA		2.4
Chain guide	CK3Q 6M256 BA	8C1Q-6M256-AA	2.2	
Chain guide	BK3Q 6M256 AA	CK3Q6M256AA		2.4
Oil pump chain tensioning guide	3S7Q 6L266 AE	8C1Q-6L266-AA	2.2	2.4
Oil pump drive chain	3S7Q 6A895 AA		2.2	2.4
Waterway plug	W528005S446	BC1Q-6024-AA		2.4
Waterway plug	BC1Q-6024-AA		2.2	
Tensioner tensioner	BK2Q 6K261 AA	BK2Q-6K261-AA	2.2	2.4
Thermostat bracket	4C1Q 8A588 BA	4C1Q-8A588-BA	2.2	
Thermostat bracket	4C1Q-8A588-A1C			2.4
Crankshaft rear oil seal	3S7Q 6701 AB	FK2Q-6701-AA	2.2	2.4
Crankshaft rear oil seal	FK2Q-6701-AA		2.2	
DU4D24 water pump manifold - water supply manifold	YC1Q 8A544AC			2.4
Thrust	BK2Q 6337 AAB	8C1Q-6337-AAA	2.2	2.4
Gasket	BK3Q 6C073 BA	BK3Q-6C073-BA	2.2	
Connecting rod	4C1Q 6211 AAA	4C1Q 6211 AAB		2.4
Connecting rod	4C1Q 6211 AAB		2.2	
Connecting rod	4C1Q 6211 BAA		2.2	2.4
Connecting rod assembly	5C1O-6200-AC2A	5C1O 6200 AC2A		2.4
Oil filler cap	YS4G 6766AA		2.2	2.4
Valve spring seat	XS7Q 6514 BA	XS7Q 6514BA	2.2	
DU4D24 valve spring seat	XS7Q 6514BA		2.2	2.4
DU4D24 oil cooling oil seal	6C1Q 6L710BA	6C1Q-6L710-BA		2.4
Exhaust manifold gasket	2C1Q-9448-A1B		2.2	2.4
Bushing	YC1R 7600 AA		2.2	2.4
valve guide	AC1Q-6510-AA		2.2	2.4
Exhaust camshaft	6C1Q-6A273-DA	6C1Q-6A273-DB		2.4
Air filter assembly	6C11-9600BC			2.4
Oil pump sprocket	6C1Q-9P919-B1A			2.4
Crankshaft sprocket	BK2Q-6306-A1A			2.4
Speed sensor mounting bracket	2S7Q 6023 AC	2S7Q-6023-AC	2.2	2.4
Speed sensor mounting bracket	2S7Q-6023-AC		2.2	
Air flow sensor	6C11 12B579AA			2.4
DU4D24 crankshaft position sensor	2S7Q 6C315AC	2S7Q 6C315 AC		2.4
Camshaft position sensor	6C11 12K073 AC		2.2	2.4
Camshaft position sensor	6C11-12K073-AC		2.2	2.4
Oil Pressure Sensor	3S71 9278 AB		2.2	2.4
MAP sensor (intake pressure sensor)	6C11 9F479 AB			2.4
Glow plug connector	BC1Q-6M091-AA			2.4
Waterway plug	W711178S437		2.2	2.4
Supercharger oil filter	2S7Q 6C683 AA		2.2	
DU4D24 supercharger oil filter 1316019	2S7Q 6C683AA	2S7Q 6C683 AA		2.4
DRIVE tensioner	BK3Q 6A228BH	DC1Q-6A228-AA	2.2	
Piston pin snap ring	XS7Q-6140-A1B			2.4
Locating pin	W700545S300		2.2	2.4
Engine cooling return pipe	6C11-8C351AD	8C11-8C351AA		2.4
Water pipe	8C11-8C351AA		2.2	2.4
Belt	BC1Q-6C301BA			2.4
DU4D24 camshaft cover washer	6C1Q 6K780AB			2.4
Water pump outlet	6C1Q-8K512-A1B			2.4
Cylinder head cooling water outlet	6C1Q-8250-A1A		2.2	2.4
Idler (metal) assembly	BC1Q-19A216-BA		2.2	2.4
Locating pin	XS7Q 6397 AA		2.2	2.4
DU4D24 positioning pin (upper end of camshaft cham	XS7Q 6397AA	XS7Q 6397 AA		2.4
Gearbox locating pin "Pin13, 3X23Hollow"	W703519S300		2.2	2.4
DU4D24 injector nozzle	6C1Q 9M577AB			2.4
Connecting rod assembly	5C1O-6200-AA2A	5C1O 6200 AA2A		2.4
Cylinder block	6C1Q-6U004-B3F			2.4
Radiator inlet pipe	6C11-8B274EE			2.4
Oil pump inlet pipe fittings	BC1Q-6615-AA			2.4

Part Name	Reference No.	Replacement	Output
Filter cooling inlet pipe	6C1Q-8N039-B1D		2.4
Cooling tube	6C11-6B850BD		2.4
V348 oil filter	6C1Q 6744AA	6C1Q 6744BA	2.4
Air filter	CC11 9C623BE	CC11 9C623BF	2.2
Throttle body	8C1Q 9F991 AA		2.2
Fourth common rail oil inlet pipe	6C1Q 9C993 DB		2.4
Second common rail inlet oil pipe	6C1Q 9C993 BB		2.4
First common rail inlet oil pipe	6C1Q 9C993 AB		2.4
Second and third common rail inlet oil pipe	BK2Q 9C993 BB	BK2Q 9C993 BC	2.2
High pressure common rail inlet pipe	BK3Q 9J323 AD	BK3Q 9J323 AE	2.2
Third common rail inlet oil pipe	6C1Q 9C993 CB		2.4
Bypass pipe assembly (thermometer to water)	BK3Q-8A582-AA		2.2
Oil gauge catheter	6C1Q-6754-B2D		2.4
Machine filter assembly	6C1Q-6B624-B1B		2.4
Nozzle retaining clip bolt	9P2-9T506-AA		2.2
bolt	W500415S430		2.2 2.4
Screw	W500015S437		2.2 2.4
Screw	W500015S437		2.2 2.4
bolt	W500114S437		2.2 2.4
bolt	W500100S437		2.2 2.4
bolt	W711679S437	W711679-S437	2.4
DU4D24 grease nipple clip	6C1Q 9L535 AC	6C1Q 9L535 AD	2.4
Supercharger intake manifold	6C1Q-6K686-A1C		2.4
Intake valve	BK2Q-6507-BB		2.2
DU4D24 guide plate screw	6C1Q 6K282AC		2.4
Locating pin	W711965S300	W711965 S300	2.4
Locating pin	W711965S300	W711965 S300	2.4
Fuel injection pump sprocket bolt	4R8Q 9D390 AB	4R8Q-9D390-AB	2.4
Fuel injection pump sprocket nut	4R8Q-9D390-AB		2.2
Bolt M8X25Hf8	W500024S437		2.4
Bolt M8X25Hf8	W500024S437		2.2 2.4
Bolt M8X25Hf8	W500024S437		2.4
bolt	W708944S300	W708944-S300	2.2 2.4
bolt	1C1Q 6C687 AB	1C1Q 6C687 AC	2.4
Bolt (9800and8A588)	1C1Q 6C687 AC		2.2
Bolt (9800and8A588)	1C1Q 6C687 AC		2.2
DU4D24 oil pan drain plug	97JM 6730BA	97JM 6730CA	2.2 2.4
bolt	W710003S300		2.4
bolt	W710003S300		2.4
DU4D24 special bolt (link bolt)	YC1Q 6215AB		2.4
Thermostat and shell assembly	8C1Q-8A586-AA		2.4
Cylinder head gasket (optional)	9C1Q-6051-CA		2.4
bolt	W500119S437		2.2 2.4
bolt	W704384S437	W704384-S437	2.2 2.4
Flywheel bolt	7C1Q-6379-AA		2.4
Plug	W710167S900		2.2 2.4
Cylinder head bolt	XS7Q 6065 A2D	XS7Q-6065-A2D	2.4
Speed sensor mounting bracket bolt	W500021S437		2.2
Speed sensor mounting bracket bolt	W500021S437		2.2 2.4
bolt	W500110S437		2.2 2.4
bolt	W500110S437		2.2
Stud	W706787S437		2.2 2.4
Stud	W706787S437		2.4
bolt	XS7Q 6D302 AA		2.2 2.4
Nut	W520512S442		2.2 2.4
Nut	W520512S442		2.2
bolt	W500413S442		2.2 2.4
bolt	W500413S442		2.2 2.4
bolt	W715587S442	W715587-S442	2.2 2.4
bolt	W709542S437		2.2 2.4
bolt	W500500S430		2.2 2.4
bolt	W708892S437	BK2Q 6A548 BA	2.2 2.4
bolt	W500302S437		2.2 2.4
Oil pump chain hub	6C1Q-9K589-A1B		2.4
Nozzle retaining clip bolt	6C1Q 9T506 AC	8C1Q-9T506-AA	2.4

Part Name	Reference No.	Replacement	Output	
EGR cooler	6C1Q 9F464 BD	6C1Q-9F464-BD		2.4
Generator mounting bolt	W712572S437		2.2	2.4
Flywheel positioning pin	W706939S300	W706939-S300	2.2	2.4
Glow plug	BC1Q-6M090-AA			2.4
Exhaust valve seat	AC1Q-6057-AA		2.2	2.4
Intake port seat	AC1Q-6056-AA		2.2	2.4
Valve seal	5C1Q 6571 AB	5C1Q-6571-AC	2.2	2.4
Valve seal	5C1Q-6571-AC		2.2	2.4
Supercharger inlet pipe	BK3Q-6K679-AC	BK3Q-6K679-AD	2.2	
Supercharger inlet pipe	BK3Q-6K679-BA		2.2	
Upper spindle	BK2Q 6333 BAA	8C1Q-6333-BAA	2.2	2.4
Lower spindle	BK2Q 6A338 BAA	8C1Q-6A338-BAA	2.2	2.4
Lower spindle	BK2Q 6W332 AAA	8C1Q-6W332-AAA	2.2	2.4
Nut	W520201S437	W520201-S437	2.2	2.4
Starter mounting bolt	W708140S440	W708140S437	2.2	2.4
Starter mounting bolt	W708140S440	W708140S437		2.4
Nut	W520413S437		2.2	2.4
Idler (plastic) assembly	BC1Q-6C344-AA		2.2	2.4
Valve lock	89BM 6518 AA	89BM-6518-AA	2.2	2.4
Piston cooling nozzle	BK3Q 6K868 CA	BK3Q-6K868-CA		2.4
bolt	W700107S300		2.2	2.4
bolt	YC1Q 6279 AA		2.2	2.4
Bolt BOLT.M8X75.HF	W500118S437		2.2	
Bolt BOLT.M8X75.HF	W500118S437			2.4
bolt	W500504S430		2.2	2.4
Stud	W706615S442		2.2	2.4
Stud	W706615S442		2.2	
Nozzle retaining clip bolt	BK2Q 9T506 BA		2.2	
Cylinder head bolt	XS7Q 6065 C2C	XS7Q-6065-C2C	2.2	2.4
Cylinder head bolt	XS7Q-6065-C2C		2.2	2.4
EGR valve	9C1Q 9D475 AB			2.4
Upper spindle	BK2Q 6W331 AAA	8C1Q-6W331-AAA	2.2	2.4
Cooling tube	6C11 6B850CC	6C11-6B850CC		2.4
Supercharger take over	CC11 6K686AC		2.2	
Oil pump inlet pipe fittings	BK2Q-6L630-AA		2.2	
DU4D22 sealing ring	BK3Q-6L710-AA		2.2	
DU4D24 water temperature sensor	7M51 12A648BA		2.2	
bolt	W701219S437		2.2	2.4
rivet	W712141S300			2.4
Plug	W711692S900		2.2	2.4
Nut	W520102S403	W716271S437		2.4
Nut	W520102S403	W702586S437		2.4
Nut	W520102S403			2.4
Intake pipe (intercooler low pressure pipe to)	BC1Q-9K640-AA			2.4
Engine front hook	XS7Q-17A084-A1E			2.4
Engine rear hook (recycling)	YC1Q-17K078-A1B			2.4
High pressure common rail inlet pipe	6C1Q 9J323 BC			2.4
High pressure common rail pump	6C1Q 9B395 BE	6C1Q 9B395 BF		2.4
Gasket (pump to cylinder)	YC1Q-8K540-A1A			2.4
DU4D22 crankcase ventilation valve gasket	BK2Q 6K780BA		2.2	
cover	6C1Q 9L513 AB	6C1Q-9L513-AB	2.2	2.4
DU4D24 oil pan gasket	3S7Q 6710BA			2.4
Crankcase seal (cylinder block and cylinder block)	3S7Q 6710 BB		2.2	2.4
Locating pin	BK2Q-6397-AA		2.2	
Locating pin	BK2Q-6397-AA		2.2	
Locating pin	BK2Q 6397 AA	BK2Q-6397-AA	2.2	
Locating pin	BK2Q 6397 AA	BK2Q-6397-AA	2.2	
EGR cooling gasket	6C1Q-9H454-B1B			2.4
EGR valve outlet gasket	6C1Q-9D468-A1B		2.2	2.4
Exhaust manifold outlet gasket	6C1Q-9L461-A1C			2.4
Supercharger assembly	LC1Q-6K682-AA		2.2	
Cylinder head bolt	6C1Q 6065 AA	6C1Q-6065-AA	2.2	
Gasket	YC1Q-6L050-A1D			2.4
EGR intake manifold (with intake manifold phase	BK2Q-9E470-CA		2.2	
Piston pin	5S7Q-6135-AA1A		2.2	

Part Name	Reference No.	Replacement	Output	
DU4D24 timing gear cover opening cover	3S7Q 6095AA		2.2	2.4
Oil gauge catheter	BK3Q 6754 AD	BK3Q-6754-AE	2.2	
Radiator cover assembly CapAsy-Rad	3M5H 8100AD	DG93 8101AA	2.2	2.4
Common rail return pipe assembly	8C1Q 9K022 AC			2.4
Crankshaft sprocket	BK2Q 6306 AA		2.2	2.4
Supercharger return pipe	BK3Q 6K677 AC		2.2	
First common rail inlet oil pipe	BK2Q 9C993 AC	BK2Q 9C993 AD	2.2	
Thermostat and shell assembly	BK3Q 8A586 AB		2.2	
Cooling tube	8C11-9F476AB			2.4
Piston assembly (piston, pin and snap ring)	BK2Q-6110-D1E		2.2	
Engine front hook	BK3Q-17A084-AA		2.2	
Engine rear hook	CK4Q-17K004-AA		2.2	
Cylinder block assembly	BK3Q-6U004-AA		2.2	
Valve spring	BK2Q 6513 AA	BK2Q-6513-AA	2.2	
Valve spring	BK2Q-6513-AA		2.2	
Exhaust valve	BK2Q-6505-BB	BK2Q-6505-BC	2.2	
Air filter	1C15 9601AF	1C15 9601A1F	2.2	
High pressure rail	BK2Q 9D280 AB		2.2	
First ring	BK2Q-6150-AAE		2.2	
Third ring	BK2Q-6153-AAD		2.2	
Glow plug	BK3Q 6M090 AB		2.2	
DU4D24 intake air flow sensor	8V21 12B579AA		2.2	
EGR valve	BK2Q 9D475 CB	BK2Q 9D475 CC	2.2	
Throttle valve	BK2Q 9E926 AC		2.2	
Oil pump assembly	BK2Q 6600 BA	BK2Q 6600 CA	2.2	
Water Pump Assembly	BK3Q 8A558 CB	DC1Q-8A558-AA	2.2	
Piston cooling nozzle	BK2Q-6K868-BA		2.2	
DU4D24 camshaft cover gasket	6C1Q 6K260AA			2.4
EGR valve inlet gasket	6C1Q-9H454-A1C			2.4
Intercooler	CC11 9L440BF		2.2	
Starter assembly	7C19-11000AB	7C19-11000AC		2.4
Starter assembly	7C19-11000AB	7C19-11000AC		2.4
Cylinder block front cover assembly	3C1Q 6019 AB			2.4
EGR valve	8C1Q 9D475 AA			2.4
Camshaft cover	BC1Q-6K271-AA	BC1Q-6K271-AB		2.4
Generator assembly	CC1T-10300CC	CC1T-10300CD	2.2	
Flywheel assembly	BK3Q-6375-AB	BK3Q-6375-AC	2.2	
Cylinder head gasket (optional)	9C1Q-6051-AA			2.4
Water Pump Assembly	7C19-8A558-AB			2.4
DU4D24 supercharger	6C1Q 6K682DF			2.4
Supercharger device	BK3Q 6K682 DA		2.2	
Generator bracket	6C1Q 10K019 AD	BC1Q-10K019-AA		2.4
Air conditioner tensioner assembly	6C1Q 6A228BC	6C1Q-6A228BC		2.4
V348 air filter	1C15 9601AE	1C15-9601AE		2.4
Exhaust manifold	6C1Q-9430-C1D			2.4
Intake and exhaust valve rocker arm support assembly	BK2Q 6K551 BC	BK2Q-6K551-BC	2.2	
Intake and exhaust valve rocker arm support assembly	6C1Q 6K551 BA	BK2Q-6K551-BC		2.4
Camshaft sprocket	6C1Q 6256 AC	8C1Q-6256-AA	2.2	2.4
Oil pump inlet pipe fittings	BK3Q 6615 AA		2.2	
Connecting rod bolt	XS4Q 6215 AB		2.2	
Oil sump assembly	9C1Q 6675 AA		2.2	
Oil ruler	6C1Q-6750-B2C			2.4
DU4D22 hood bolt	BK2Q 6A548EA	BK2Z6A548A	2.2	
Camshaft cover bolt	BK2Z6A548A		2.2	
Plug	W704503S300		2.2	
Plug	W704452S300		2.2	
Bracket (return pipe support)	6C1Q-9P995-B1C			2.4
bolt	W500424S430	W500424S442		2.4
Oil pump sprocket bolt	W500424S442	W500424 S442	2.2	
Oil pump sprocket bolt	W500424S442	W500424 S442	2.2	
Engine speed sensor (crank positive)	BK21 6C315 BA		2.2	
Piston clasp	1S7Q-6140-A1A		2.2	
Snorkel	8C19-6C646AC			2.4
Machine filter	BK2Q-6714-AA		2.2	
Supercharger inlet pipe	6C1Q 6K679 DD	8C1Q-6K679-AA		2.4

Part Name	Reference No.	Replacement	Output	
Engine speed sensor	BK21 6C315 AC	BK21 6C315 BA	2.2	
bolt	W500112S437		2.2	2.4
bolt	W500112S437			2.4
Hose & Bracket Assembly - Radiator Outlet	CC11-8286AC		2.2	
Cylinder block front cover assembly	BK3Q 6019 BB		2.2	
bolt	BK2Q 6A345 AA	8C1Q-6A345-AA	2.2	2.4
Cylinder head temperature sensor	9C11 6G004 EA	9C11 6G004 ED		2.4
Piston (optional)	6C1Q-6110-CA1C			2.4
Exhaust valve	2S7Q-6505-A3C			2.4
Common rail return pipe assembly	BK3Q-9K022-AG		2.2	
Camshaft cover bolt	BK2Q 6A548 GA		2.2	
Camshaft cover bolt	CK4Q 6A548 AA		2.2	
DU4D24 oil filter cover 1303477	3M5Q 6737AA			2.4
Cylinder head cover	BK2Q 6K271 AJ	BK2Q 6K271 AK	2.2	
Filter cooling inlet pipe (8520 to 6B624)	BK3Q-8N039-CB	CK3Q-8N039-AA	2.2	
DU4D22 injector pad	BK2Q 9M577AA		2.2	
Belt	DC1Q-6C301CA		2.2	
Second ring	BK2Q-6152-AAE	BK2Q-6152-AAF	2.2	
Bolt recycling	W500423S442			2.4
Bolt recycling	W500423S442		2.2	2.4
Bolt recycling	W500423S442			2.4
Nut	W520412S437		2.2	2.4
bolt	W500014S437			2.4
bolt	W500014S437		2.2	2.4
bolt	W500014S437		2.2	2.4
Bolt and spring washer assembly	CN1420845-A01		2.2	
Cooling inlet gasket	4C1Q-8K525-A1B		2.2	2.4
O-ring	W711698S300			2.4
Machine filter assembly	BK3Q-6B624-CA	BK3Q-6B624-CD	2.2	
Oil filter	6C1Q 6744BA			2.4
Supercharger return pipe	6C1Q 6K677 CB	8C1Q-6K677-AA		2.4
Bracket (inlet pipe support)	6C1Q-9B325-B1B			2.4
Water pipe clamp	W527438S300	W527438-S300	2.2	2.4
Generator terminal cover	6C1T-10A375AA		2.2	2.4
Electric racing fixing nut	W520400S437			2.4
Starter grounding wire harness fixing nut	W705790S440	W705790S415	2.2	2.4
Starter grounding wire harness fixing nut	W705790S440	W705790S415		2.4
Nut	W520100S437			2.4
Stud	W704237S437			2.4
bolt	W713411S900		2.2	
bolt	W713411S900			2.4
bolt	W500104S437		2.2	
bolt	W500104S437			2.4
Glow plug wiring bolt	W505532S437			2.4
Pump mounting bolt	W704087S437			2.4
Nut	W520102S440		2.2	2.4
Nut	W520102S440			2.4
Chain assembly	BK3Q 6268 AA	BK3Q6268AA	2.2	2.4
High pressure common rail pump bracket	BK3Q-9B552-AB		2.2	
Nozzle holder	BK2Q 9L535 AD	BK2Q 9L535 AE	2.2	
DU4D22 hood gasket	BK2Q 6K260AA	BK2Q 6K260AB	2.2	
Oil sump assembly	YC1Q 6675 CC			2.4
DU4D24 machine filter assembly	6C1Q 6B624BA			2.4
Cylinder head mechanical parts	6C1Q-6049-BE	6C1Q 6049 BE		2.4
Cylinder head mechanical parts	BK3Q-6049-AC	BK3Q-6049-AE	2.2	
Oil nozzle	6C1Q 9K546 AC			2.4
Oil nozzle	6C1Q 9K546 BC			2.4
Oil nozzle	BK2Q 9K546 AG		2.2	
Piston assembly	6C1Q 6105 DBC			2.4
Oil pump assembly	7C19-6600-AB			2.4
Link member	BB3Q-6200-AAA		2.2	
Starter assembly	CC1T-11000BB		2.2	
Cylinder head gasket (optional)	9C1Q-6051-BA			2.4
Valve spring	6C1Q-6513-A1A			2.4
Guide plate screw	6C1Q 6K282 AC	8C1Q-6K282-AA	2.2	

Part Name	Reference No.	Replacement	Output
Bolt (flywheel mounting)	AC16 6379 AA		2.2
Piston pin	XS7Q-6135-AA1A		2.4
Cylinder block mechanical parts	EEC1-6010-BA		2.2
Supercharger	6C1Q 6K682 EN	6C1Q-6K682-E1N	2.4
Flywheel assembly	7C1Q-6375-AD		2.4
Flywheel assembly	7C1Q-6375-CA		2.4
Generator assembly	7C19-10300AC	7C19-10300AD	2.4
Generator assembly	7C19-10300AD	7C19-10300AE	2.4
Crankshaft	4C1Q-6303-B4A	8C1Q-6303-AA	2.2
Cylinder block mechanical parts	EEC1-6010-AA		2.4
PUMA Light Euro III 100PS short engine	7C1Q-6006-EA		2.4
PUMA Light Euro III Diesel Engine 100PSPUMA Medi	7C1Q-6011-AA		2.4
PUMA light and heavy European III & Euro IV 115PS,	7C1Q-6006-FA		2.4
PUMA Light and Heavy Euro III & Euro IV 115PS, 140	7C1Q-6011-CA		2.4
PUMA Euro V 2.2L short engine	DC1Q-6006-AA		2.2
PUMA Euro V 2.2L cylinder	DC1Q-6011-AA		2.2
PUMA China VI short engine	LC1Q-6006-AA		2.2
PUMA China VI cylinder	LC1Q-6011-AA		2.2
Main bearing cap bolt	4C1Q 6345 AA		2.2 2.4
Sensor heat shield	6C11 6D310AA	9C19-6D310AA	2.4
Cylinder block	LC1Q-6010-AA		2.2
Shield	BK3Q 6D310AB		2.2
Crankshaft position sensor shroud mounting snail	W702008S437		2.2
Starter mounting locating pin	W704187S300		2.2
Water channel plug gasket	W703346S437		2.2
Cylinder head mechanical parts	BK3Q-6049-AE		2.2
Cylinder head mechanical parts	LC1Q-6049-AB		2.2
Bolt (generator bracket installation)	W500514S442		2.2
U375 bolt	W500424 S442		2.2
Cylinder head bolt	6C1Q-6065-AA		2.2
Exhaust valve	BK2Q-6505-BC		2.2
Valve spring seat	XS7Q-6514-BA		2.2
Cylinder head gasket (optional)	BK3Q 6051 A1C		2.2
Cylinder head gasket	BK3Q 6051 B1B	BK3Q 6051 B1C	2.2
Cylinder head gasket (optional)	BK3Q 6051 B1C		2.2
16mm blind rivet stuffy	W711569S300		2.2
Valve lock	89BM-6518-AA		2.2 2.4
bolt	W500013S437		2.2 2.4
Cylinder head mechanical parts	6C1Q 6049 BE		2.4
Cylinder head temperature sensor	9C11 6G004 ED		2.4
Cylinder head bolt	XS7Q-6065-A2D		2.4
DU4D24 exhaust valve	2S7Q 6505 AC	BK2Q 6505BB	2.4
DU4D22 exhaust valve	BK2Q 6505BB		2.4
DU4D24 intake valve	XS7Q 6507A1C	BK2Q 6507BB	2.4
DU4D22 intake valve	BK2Q 6507BB		2.4
Intake valve	XS7Q-6507-A3C		2.4

Part Name	Reference No.	Replacement	Output	
Exhaust manifold	BK3Q-9430-CD	BK3Q-9430-MA	2.2	
Exhaust manifold	BK3Q-9430-MA		2.2	
Exhaust manifold heat shield	BK3Q 9N454 BA	BK3Q-9N454-BA	2.2	
Exhaust manifold heat shield	BK3Q-9N454-BA		2.2	
Isolation bushing	W700330S300		2.2	2.4
Nut-front exhaust pipe upper bracket is connected to t	W520103S403		2.2	2.4
Stud (exhaust manifold positioning and installation)	W715587-S442		2.2	2.4
Exhaust manifold bolt	W706721S437M			2.4
Stud	W706963S437			2.4
Oil pump assembly	BK2Q 6600 CA		2.2	
Oil pump chain tensioning guide	8C1Q-6L266-AA		2.2	2.4
With positioning rod bolt (oil pump chain tension plate)	W708944-S300		2.2	2.4
bolt	W704397S437			2.4
V348 positioning pin	W711965 S300			2.4
Oil ruler	BK3Q 6750 AE	DC1Q-6750-AA	2.2	
Oil ruler	DC1Q-6750-AA		2.2	
bolt	W500022S437		2.2	
Oil gauge catheter	BK3Q-6754-AE		2.2	
Oil level sensor	6C11 6C624 BB		2.2	
DU4D24 cylinder block bowl plug	W528007S300		2.2	
Cylinder block	6C1Q-6U004-B3G			2.4
Oil position sensor plug	W711870S446	W711870 S446		2.4
Oil position sensor plug	W711870 S446			2.4
DU4D24 oil pan oil drain plug	97JM 6730CA		2.2	2.4
Filter cooling inlet pipe	CK3Q-8N039-AA		2.2	
Hose assembly - oil cooler effluent	CC11-6B850AB	BK31-6B850AA	2.2	
Hose assembly - oil cooler effluent	BK31-6B850AA		2.2	
Hose assembly - oil cooler	CC11-6B850DB	HC19-6B850-AA	2.2	
Cooling water pipe	HC19-6B850-AA		2.2	
Machine filter assembly	BK3Q-6B624-CD		2.2	
bolt	W705023S437		2.2	
Cooling tube	6C11-6B850CC			2.4
Bolt BOLT.M8X70.HF.8	W500117S437			2.4
Oil cooler connecting pipe	8C1Q-8K524-A1A			2.4
Machine filter gasket	6C1Q-6L710-BA			2.4
Water pipe clamp (machine filter cooling inlet pipe 8N)	W527404S300	W527404-S300	2.2	2.4
Water pipe clamp	W527404-S300		2.2	2.4
Radiator inlet pipe	CC11-8260AA		2.2	
Radiator outlet	6C11-8B273AE			2.4
bolt	W716271S437			2.4
bolt	W505544S437			2.4
Secondary tank ventilation hose 3C	AC19-8W005AA		2.2	2.4
Secondary tank ventilation hose	6C11-8W005EA		2.2	2.4
Secondary tank	6C11-8K218AC		2.2	2.4
Secondary tank cover	DG93 8101AA		2.2	2.4
Screw-brake drawing	W503924S442		2.2	2.4

Part Name	Reference No.	Replacement	Output
Water Pump Assembly	DC1Q-8A558-AA		2.2
DU4D24 water pump pulley	2U1Q 8509BA		2.2
M8X85 bolt	W703280S442		2.2
Bolt (pump)	W715379S442		2.2
Bypass pipe assembly	YC1Q-8A582-A1C	9P2-8A582-AB	2.4
Bypass pipe assembly	9P2-8A582-AB		2.4
DU4D24 water pump repair kit	2U1Q 8591AB		2.4
DU4D24 water pump pulley	2U1Q 8K500BA		2.4
Thermostat bracket	4C1Q-8A588-BA		2.2
Outlet seal - special ring	W704553S300		2.4
Outlet hose assembly	4C1Q-8B555-A1A		2.2 2.4
Thermostat assembly	XS7Q 8575AA		2.2 2.4
bolt	W500022S437		2.2 2.4
Nut	W520201-S437		2.2 2.4
Cooling water pipe	BK3Q-8K520-BB		2.2
Pump outlet pipe (pump to cooling)	BK3Q-8K512-BA	BK3Q-8K512-BD	2.2
DU4D24 cooling water pipe gasket	4C1Q 8K525AB		2.4
Cooling inlet pipe	6C1Q-8K520-A1B		2.4
DU4D24 fuel temperature sensor	6C1Q 9F951AA		2.4
DU4D24 fuel metering valve	6C1Q 9358AB		2.4
High pressure common rail pump inlet pipe	LC19-9J280-AA		2.2
O-ring	LC1Q-9417-AA		2.2
Oil pump flange	LC1Q-9K589-AA		2.2
Semicircle key	LC1Q-3609-AA		2.2
Oil pump sprocket	BK3Q 9P919 AD	DC1Q-9P919-AA	2.2
Bolt (oil pump bracket)	W706825S442		2.2
Seal ring	W790308 S900		2.2
EGR intake nozzle	8C1Q 9E470 DA	8C1Q-9E470-D1A	2.2
DU4D24 high pressure common rail inlet pipe clamp	6C1Q-9800-AC		2.4
High pressure rail	8C1Q 9D280 AA		2.4
DU4D24 high pressure rail pressure relief valve	6C1Q 9H321 AB		2.4
Fourth common rail oil inlet pipe	BK2Q 9C993 CB	BK2Q 9C993 CC	2.2
Bracket (return pipe support)	BK3Q-9P995-AC	BK3Q-9P995-AD	2.2
Bolt (tubing bracket, rail to cylinder)	W505545S437		2.2
Briquetting bolt	LC1Q-9T506-AA		2.2
Injector clamp	LC1Q-9L535-AA		2.2
Injector (BOSCH)	LC1Q-9K546-AA		2.2
Injector pad	LC1Q-9K577-AA		2.2
Fourth common rail oil inlet pipe	LC1Q-9C993-DA		2.2
Second common rail inlet oil pipe	LC1Q-9C993-BA		2.2
Third common rail inlet oil pipe	LC1Q-9C993-CA		2.2
First common rail inlet oil pipe	LC1Q-9C993-AA		2.2
Fuel rail assembly (BOSCH)	LC1Q-9D280-AA		2.2
High pressure common rail inlet pipe	LC1Q-9J323-AA		2.2
Oil return pipe bracket	LC1Q-9P995-AA		2.2
Bolt (tubing bracket, rail to cylinder head)	W719904S437		2.2

Part Name	Reference No.	Replacement	Output
Oil return pipe assembly	LC1Q-9K022-BB		2.2
Injector return pipe fittings	LC1Q-9K022-AB		2.2
Gasket-oil rail installation	LC1Q-9E568-AA		2.2
DU4D24 injector return pipe clamp	4S7Q 9F524AB		2.2
DU4D24 injector to common rail return pipe O-ring	8H4Q 9T558AA		2.2
High pressure common rail inlet pipe clamp	6C1Q-9800-A1C		2.2 2.4
Supercharger unit (6K685 VGT bracket PIA)	BK3Q 6K682 CB	BK3Q 6K682 CC	2.2
Supercharged heat shield	CK3Q-6K733-AD		2.2
Nut	W520102S424		2.2
Bolt (supercharger heat shield)	W716710S901		2.2
Supercharger return pipe gasket (supercharger)	4R8Q 6N652 AA		2.2
V348 bolt	W790306S900		2.2
Compressor-specific elastic belt (4PK966)	T6C1Q-6C301-AA		2.2
Crankshaft double pulley	TBC1Q-6B319-AA		2.2
Stud (6C344 idler)	W715972S442		2.2
Nut	W520413S442		2.2
bolt	W702141S442		2.2
Stud bolt M8X20+M8X30	W715429S437		2.2
bolt	W716099S442		2.2
Belt cover	CC1Q 10317DA		2.2
Stud	W709549S437	W709549-S437	2.4
Belt cover	AC1Q-10317AA		2.4
Hexagon socket head cap bolt (M10X30)	W710778S442		2.2 2.4
Crankshaft damping pulley	BC1Q-6B319-AA		2.2 2.4
PJB bracket fixing nut	W701152S437		2.2 2.4
Bolt (generator bracket installation)	W500514S442		2.2
Stud	GP2-19D632BA		2.2
Generator mounting bolt	W715350S442		2.2
Generator mounting bolt	W715070S442		2.2
Generator nut	W707759S415	W711953S900	2.2
Generator (220A)	THC19-10300-CA		2.2
Generator bracket	GP2-10239-EB		2.2
Generator bracket	BK3Q-10239-BB	BK3Q-10239-CA	2.2
bolt	W500113S437		2.4
Glow plug connector	BK2Q-6M091-AE		2.2
Starter nut	W701596S415		2.2
Intake nozzle	8C19-9K640-AA		2.4
EGR intake nozzle	8C1Q 9E470 DA	8C1Q-9E470-D1A	2.4
DU4D24 intake pressure sensor	6X71-9F479-AA		2.4
bolt	W500101S437		2.4
bolt	W500022S437		2.4
Intake sensor	AG91 9F479 AB	AG91 9F479 AC	2.2
Nut	W520101S437		2.2
EGR exhaust gas circulation pipe	LK2Q-9E470-AA		2.2
Intercooler pressure sensor	AG91-9F479AC		2.2
EGT sensor	LK2A-12B591-AA		2.2

Part Name	Reference No.	Replacement	Output
DU4D22EGR circulation pipe O-ring	BK2Q-8527-AA		2.2
bolt	W500211S437		2.2
bolt	W506976S442		2.2
Bolt (throttle valve)	W506859S303		2.2
EGR cooler	CK3Q 9F464 AA	CK3Q 9F464 AB	2.2
EGR cooler	CK3Q 9F464 BA	CK3Q 9F464 BB	2.2
EGR cooling gasket (EGR cooler with	BK2Q 9H454 DA	BK2Q-9H454-DA	2.2
Bolts (EGR and EGR coolers)	W716085S437		2.2
EGR valve gasket (EGR valve and EGR cooler)	BK2Q 9D468 CB		2.2
EGR inlet pipe	CC11-9Y438FA		2.2
Hose Assembly - EGR & Heater	CC11-9M445AA		2.2
Pipe assembly - EGR cooler water inlet	BK31-9Y438AB		2.2
EGR inlet pipe	CK4Q-9F476-AB	CK4Q-9F476-AC	2.2
DU4D24EGR cooler bracket	6C1Q-9F484-B1B		2.4
Cooling tube	7C19-9Y438AA	EC19-9Y438AA	2.4
Cooling tube	9C19-18C266EA		2.4
Cooling tube	8C11-9Y438AB		2.4
Cooling tube	7C19-9Y438BA		2.4
Crankcase ventilation tube	BK3Q 6A886 CC		2.2
V348 steam vent pipe assembly (steam)	6C1G 6758AB		2.4
V348 gasoline separator (steam)	4L5G 6A785AD		2.4
V348 steam pump (steam)	4L5G 6A666AA		2.4
V348 steam crankcase ventilation valve lock ring (stea	3S4G 6K780AB		2.4
V348 steam clamp (steam)	1S7G 6A892AA		2.4
V348 steam washer (steam)	1S7G 6B752AC		2.4
bolt	W500214S437		2.4
Exhaust camshaft	BK2Q-6A273-BA	BK2Q-6A273-CA	2.2
Intake camshaft	BK3Q-6A270-CA	BK3Q-6A270-EA	2.2
Intake camshaft	BK3Q-6A270-EA	BK3Q-6A270-EB	2.4
engine cover	LC19-9U550-AA		2.2
engine cover	CC1Q-9U550BB		2.2
0 hood buckle nail	CC1Q 6A957AA		2.2
Hood buckle	CC1Q 6A957BA		2.2
Cylinder head cover	LC1Q-6K271-AA		2.2
Engine soundproof cover	LC1Q-9U550-AA		2.2
Anti-collision bracket	LC1Q-9C244-AA		2.2
Harness mounting studs	W707267S437		2.2
DU4D22 injector soundproof cover	BK2Q 9U550BB	BK2Q 9U550BC	2.2
DU4D22 injector bolt to hood seal	BK3Q 9T529AB		2.2
DU4D22 hood double stud	BK2Q 6A548FA		2.2
DU4D22 hood isolation washer	BK2Q 6C518AA		2.2
DU4D22 hood bushing	BK2Q 6K562AA		2.2
DU4D24 rocker cover hexagon head bolt 1198100	2S7Q 6A548BA		2.4
DU4D24 valve cover grommet (cylinder head)	2S7Q 6C518DA		2.4
DU4D24 camshaft cover hex screw 1376473	6C1Q 6A548AB		2.4
Engine oil filling conduit	6C1Q 6763BC		2.4

Part Name	Reference No.	Replacement	Output	
bolt	W500423S437			2.4
Oil filling catheter bracket	6C1Q 6A867BA			2.4
Bolt (oil filling pipe and bracket)	W506852S439			2.4
bolt	W715522S442		2.2	
Crankshaft front oil seal	3S7Q 6700 AB		2.2	2.4
Piston assembly	6C1Q 6105 DAC			2.4
Piston assembly	6C1Q 6105 DCC			2.4
Piston assembly	6C1Q 6105 CBC			2.4
Piston assembly	6C1Q 6105 CCC			2.4
Piston assembly	6C1Q 6105 CAC			2.4
Piston (optional)	6C1Q-6110-CC1C			2.4
Piston (optional)	6C1Q-6110-CB1C			2.4
First ring	3C1Q-6150-AA1B			2.4
Second ring	AC1Q-6152-AAA			2.4
Third ring	3C1Q-6153-AA1A			2.4
DU4D24 connecting rod	6C1Q 6200ABA			2.4
Connecting rod assembly	5C1O-6200-AB2A	5C1O 6200 AB2A		2.4
DU4D24 connecting rod	6C1Q 6200AAA			2.4
DU4D24 connecting rod	6C1Q 6200ACA			2.4
Connecting rod bushing	6C1Q 6207 AA	6C1Q-6207-AA		2.4
Connecting rod bushing	BB3Q 6207 AA	BB3Q-6207-AA	2.2	
Stop film	XS7Q 6337 AB			2.4
Crankshaft	4C1Q-6303-B3A	4C1Q-6303-B4A		2.4
DU4D22 thrust piece	BK2Q 6337AAB			2.4
Main shaft on DU4D24	XS7Q 6W331AB			2.4
DU4D24 crankshaft bearing lower spindle 1143673	2S7Q 6A338AA			2.4
Heat shield	CC11 9F721AB		2.2	
Air filter	CC11 9600BG	CC11 9600BH	2.2	
Air filter intake pipe fastening screw	W506974S303		2.2	
Plastic nail - front wheel cover	W701259S300	W701259-S300	2.2	
Air intake to the engine intake pipe	6C11-9C623BC			2.4
Sensor fixing screw	W707204S303			2.4
Air filter	1C15-9601AE		2.2	2.4
Air filter mounting bushing	95BB-9B929AA		2.2	2.4
Air filter intake pipe (bottom)	6C11-9A675BC		2.2	2.4
Air filter intake pipe fastening screw	W505974S424		2.2	2.4
Intercooler outlet pipe	8C11 6C646BE			2.4
V348 temperature sensor	9C11 12A697BA			2.4
Intercooled exhaust pipe	7C19-6K683AD			2.4
Intercooled exhaust pipe	7C19-6K683BD			2.4
Intercooler intake assembly	6C11 9L440AC			2.4
Intercooler intake pipe	CC11-6C646BK		2.2	
Intercooler exhaust pipe	CC11-6K863BE	CC11-6K863BF	2.2	
Intercooler intake pipe	CC11-6C646DJ		2.2	
Intercooler	8C16 9L440CA		2.2	
Intercooler	8C16 9L440BB		2.2	

Part Name	Reference No.	Replacement	Output	
Intercooler intake pipe	LC19-6C646-AA		2.2	
Diesel intercooler assembly	LC11-6K775-BA		2.2	
Intercooler outlet pipe	CC11-6K863-DF		2.2	
Temperature Sensor	9C11 12A697AB		2.2	
Temperature sensor mounting bolt	W506973S437M		2.2	
bolt	W505581S440	W505581-S440	2.2	
Diesel engine control module	LC19-12A650-BA		2.2	
PCM	LC19-12A650-AA		2.2	
PCM cover	LC19-14G114-AA		2.2	
Glow plug module	LC19-12B686-AA		2.2	
GPCM bracket	LC19-12B681-AA		2.2	
Glow plug control module	CC11-12B533-AB		2.2	
PCM-125PS	DC11 12A650AA	DC11-12A650AA	2.2	
PCM-135PS	DC11 12A650BA	DC11-12A650BA	2.2	
V348PCM mainland brand	CU71 12A650AB	CU71-12A650AB	2.2	
PCM-155PS	DC11 12A650CA	DC11-12A650CA	2.2	
PCM cover	DC19-14G114AA		2.2	
Asy preheat jumper	CC11 12B686AB		2.2	
V348PCM (except DU4D244H)	AU71-12A650FC			2.4
V348PCM (for DU4D244H)	AU71-12A650GC			2.4
V348PCM (control unit) for after sales	AU71 12A650FC	AU71-12A650FC		2.4
PCM cover 3C	7C19-14N003AB			2.4
Nut-oil filter fixing	W706131S437		2.2	2.4